



ISO 9001 CERTIFIED

DNH

HEAD OFFICE, NORWAY

DNH AS

Phone..... + 47 35 98 56 00

Fax..... + 47 35 98 56 10

E-mail..... dnh@dnh.no

Web-Site..... www.dnh.no

ENGLAND

DNH WW Ltd

Phone..... + 44 1908 275 000

Fax..... + 44 1908 275 100

E-mail..... dnh@dnh.co.uk

GERMANY

DNH GmbH

Phone... + 49 040 6569 30-0

Fax..... + 49 040 6569 30-30

E-mail..... dnh@dnh.de

VES-360(T)


USA

DNH Speakers Inc


Phone..... + 1 484 494 5790

Fax..... + 1 484 494 5793

E-mail..... dnh@dnhspeakers.com

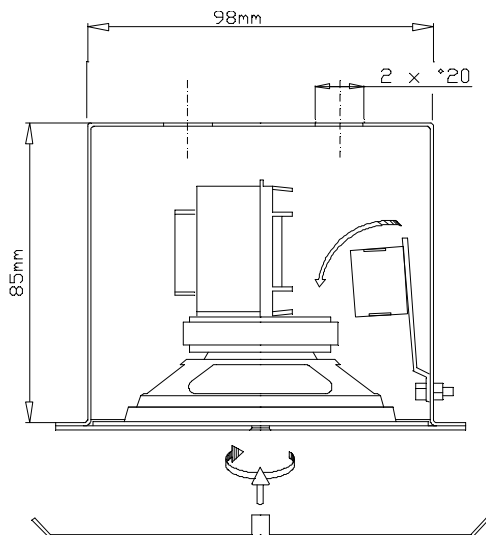


Rec. ceiling hole: $\varnothing$ 100mm

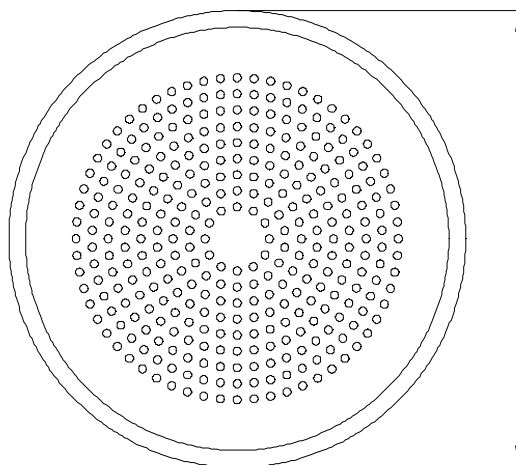

$\varnothing$ 129,5mm

BS5839 Part 8 VA compliant

Circuit diagram

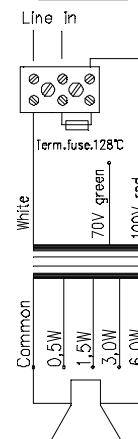

Secondary nominal tapings

C : 6,0W	6,0 W
C : 3,0W	3,0 W
C : 1,5W	1,5 W
C : 0,5W	0,5 W

Sound pressure levels at 1W/1m

SPL vs Freq



Specifications

Material / Color	Steel, alu. grill / RAL9010
Mounting	4 (2 + 2) screws
Termination	Ceramic terminals
Weight w/transformer	0,7 kg
IP-rating	NA
Max. / min. amb. temp	120°C / -20°C
Rated / max. power	6 W / 8 W
SPL 1W/1m	88 dB
SPL rated power	95 dB
Effective freq. range	220 – 20000 Hz
Dispersion (-6dB) 1kHz / 4kHz	145° / 90°
Directivity factor, Q	6,8
Options	Impedances, colors, labels

Installation, Operation and Maintenance Procedures

- Lead cable through cable gland.
- Install the steel box into the cut-out hole with 2 screws.
- If 70V, replace red cable with the green cable in the terminal.
- Connect to terminal and select required tapping.
- Install loudspeaker baffle to wall / ceiling by means of 2 screws. Screw loudspeaker grill gently until it stops.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Transformer according to British standard 5839.
- Do not open loudspeaker when energized.
- This loudspeaker is supplied with a 2 year warranty against defective workmanship.

DNH reserves the right to alter specifications without notice

