



DNH

HEAD OFFICE, NORWAY

DNH AS

Phone..... + 47 35 98 56 00

Fax..... + 47 35 98 56 10

E-mail..... dnh@dnh.no

Web-site..... www.dnh.no

ENGLAND

DNH WW Ltd

Phone..... + 44 1908 275 000

Fax..... + 44 1908 275 100

E-mail..... dnh@dnh.co.uk

GERMANY

DNH GmbH

Phone... + 49 040 6569 30-0

Fax..... + 49 040 6569 30-30

E-mail..... dnh@dnh.de

VEP-15(T)

USA


DNH Speakers Inc

Phone..... + 1 484 494 5790

Fax..... + 1 484 494 5793

E-mail..... dnh@dnhspeakers.com


ISO 9001 CERTIFIED

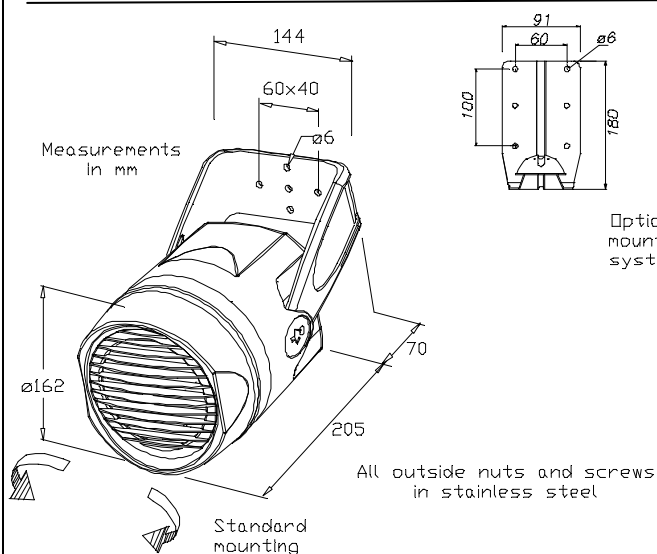

Optional mounting systems

Delivered with 1xM20 cable gland and 1xblanking plug

Circuit diagram

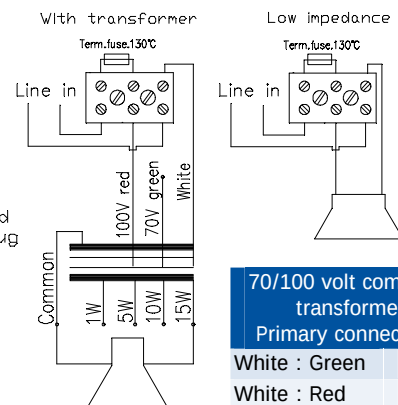

70/100 volt combined transformer Primary connections

White : Green	70 V
White : Red	100 V

Secondary nominal tapings

C : 15W	15 W
C : 10W	10 W
C : 5W	5 W
C : 1W	1 W

Sound pressure levels at 1W/1m P-5/15B



Specifications

Material / Color	ABS / V0 / RAL7035
Mounting	Bracket
Termination	Ceramic terminal
Weight w/transformer	1,84 kg
IP-rating	55
Max. / min. amb. temp	90°C / -40°C
Rated / max. power	15 W / 20 W
SPL 1W/1m	92 dB
SPL rated power	104 dB
Effective freq. range	150 – 20000 Hz
Dispersion (-6dB) 1kHz / 4kHz	° / °
Options	Impedance, colors, labels

Installation, Operation and Maintenance Procedures

- Fasten bracket with minimum 2 screws.
- To open the loudspeaker turn the front gently counter clockwise and pull.
- Lead cable through cable gland and connect to terminal.
- If 70V, replace red cable with the green cable in the terminal.
- To close the loudspeaker, align the two marks on the front and rear parts, and turn the front gently clockwise till it stops.
- Use the attached stop screw to secure the front from undesirable opening during operation. (Optional)
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Do not open loudspeaker when energized.
- This loudspeaker is supplied with a 2 year warranty against defective workmanship

DNH reserves the right to alter specifications without notice

