



ISO 9001 CERTIFIED

DNH

HEAD OFFICE, NORWAY

DNH AS

Phone..... + 47 35 98 56 00

Fax..... + 47 35 98 56 10

E-mail..... dnh@dnh.no

Web-Site..... www.dnh.no

ENGLAND

DNH WW Ltd

Phone..... + 44 1908 275 000

Fax..... + 44 1908 275 100

E-mail..... dnh@dnh.co.uk

GERMANY

DNH GmbH

Phone... + 49 040 6569 30-0

Fax..... + 49 040 6569 30-30

E-mail..... dnh@dnh.de

USA




DNH Speakers Inc

Phone..... + 1 484 494 5790

Fax..... + 1 484 494 5793

E-mail..... dnh@dnhspeakers.com

MD-60(T)

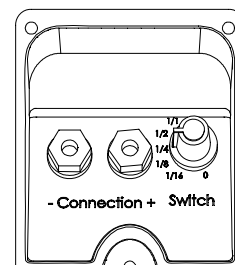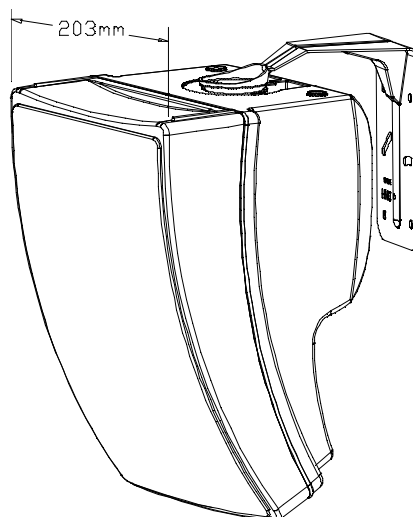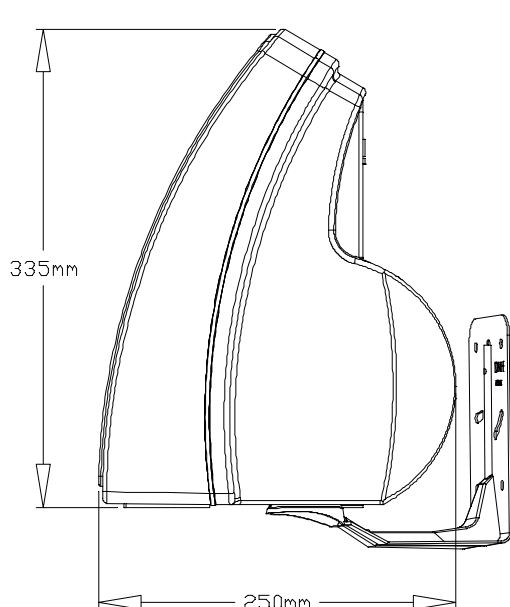


Secondary switch tapings

1 / 1	60,0 W
1 / 2	30,0 W
1 / 4	15,0 W
1 / 8	7,5 W
1 / 16	3,5 W

MD-60T is delivered with standard steel bracket as shown on the drawing, termination lid, gasket, cable glands, screws and one screw for fastening of bracket to cabinet.

Sound pressure levels at 1W/1m

SPL vs Freq

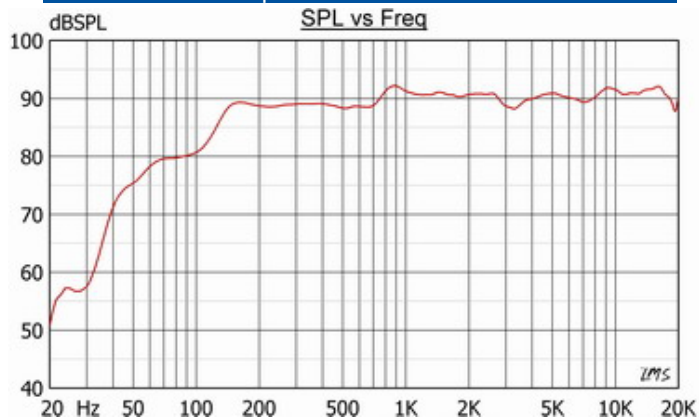

Specifications

Material / Color	ABS / Black
Mounting	Bracket
Termination	Screw terminal
Weight w/transformer	3,9 kg
IP-rating	44*
Max. / min. amb. temp	90°C / -20°C
Rated / max. power	60 W / 100 W
SPL 1W/1m	90 dB
SPL rated power	109 dB
Effective freq. range	45 – 20000 Hz
Dispersion (-6dB) 1kHz / 4kHz	110° / 55°
Options	Impedances, colors, labels

Installation, Operation and Maintenance Procedures

- MD-60 is available with 60W transformer, and optional brackets are available on request.
 - Screw bracket to wall or ceiling, place cabinet onto ball socket and tighten bolt.
 - Connect to screw terminal and select required volume with the switch.
 - Screw on lid with gasket and tighten cable glands to assure a good sealing towards cable.
 - For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
 - Do not open loudspeaker when energized.
 - This loudspeaker is supplied with a 2 year warranty against defective workmanship.
- * To achieve IP 44 the loudspeaker should be mounted with the grill 30 degrees downwards.

DNH reserves the right to alter specifications without notice

