



ISO 9001 CERTIFIED

DNH

HEAD OFFICE, NORWAY

DNH AS

Phone..... + 47 35 98 56 00

Fax..... + 47 35 98 56 10

E-mail..... dnh@dnh.no

Web-Site..... www.dnh.no

ENGLAND

DNH WW Ltd

Phone..... + 44 1908 275 000

Fax..... + 44 1908 275 100

E-mail..... dnh@dnh.co.uk

GERMANY

DNH GmbH

Phone... + 49 040 6569 30-0

Fax..... + 49 040 6569 30-30

E-mail..... dnh@dnh.de

USA


DNH Speakers Inc

Phone..... + 1 484 494 5790



Fax..... + 1 484 494 5793

E-mail..... dnh@dnhspeakers.com

VEP-6(T)

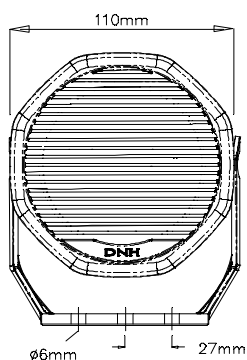

All outside nuts and screws in stainless steel.

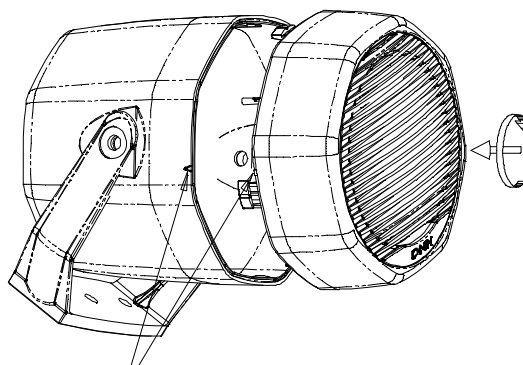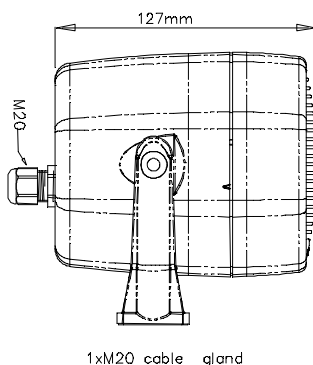

Alignment marks

Acc. British Standard 5839



Sound pressure levels at 1W/1m

SPL vs Freq



Specifications

Material / Color	ABS / RAL 7035
Mounting	Polyamide Bracket
Termination	Screw terminals
Weight	0,7 kg
IP-rating	44
Max. / min. amb. temp	90°C / -40°C
Standard version	70 V / 100 V transformer
Rated / max. power	6 W / 10 W
SPL 1W/1m	87 dB
SPL rated power	94 dB
Effective freq. range	170 – 20000 Hz
Dispersion (-6dB) 1kHz / 4kHz	N/A
Options	Impedances, colors, labels

Installation, Operation and Maintenance Procedures

- Fasten bracket with minimum 2 screws.
- To open the loudspeaker, turn the front gently counter clockwise and pull.
- Lead cable through cable gland and connect to terminal.
- If 70V, replace red cable with the green cable in the terminal.
- To close the loudspeaker, align the two marks on the front and rear parts and turn the front gently clockwise.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Do not open loudspeaker when energized.
- This loudspeaker is supplied with a 2 year warranty against defective workmanship.

DNH reserves the right to alter specifications without notice

